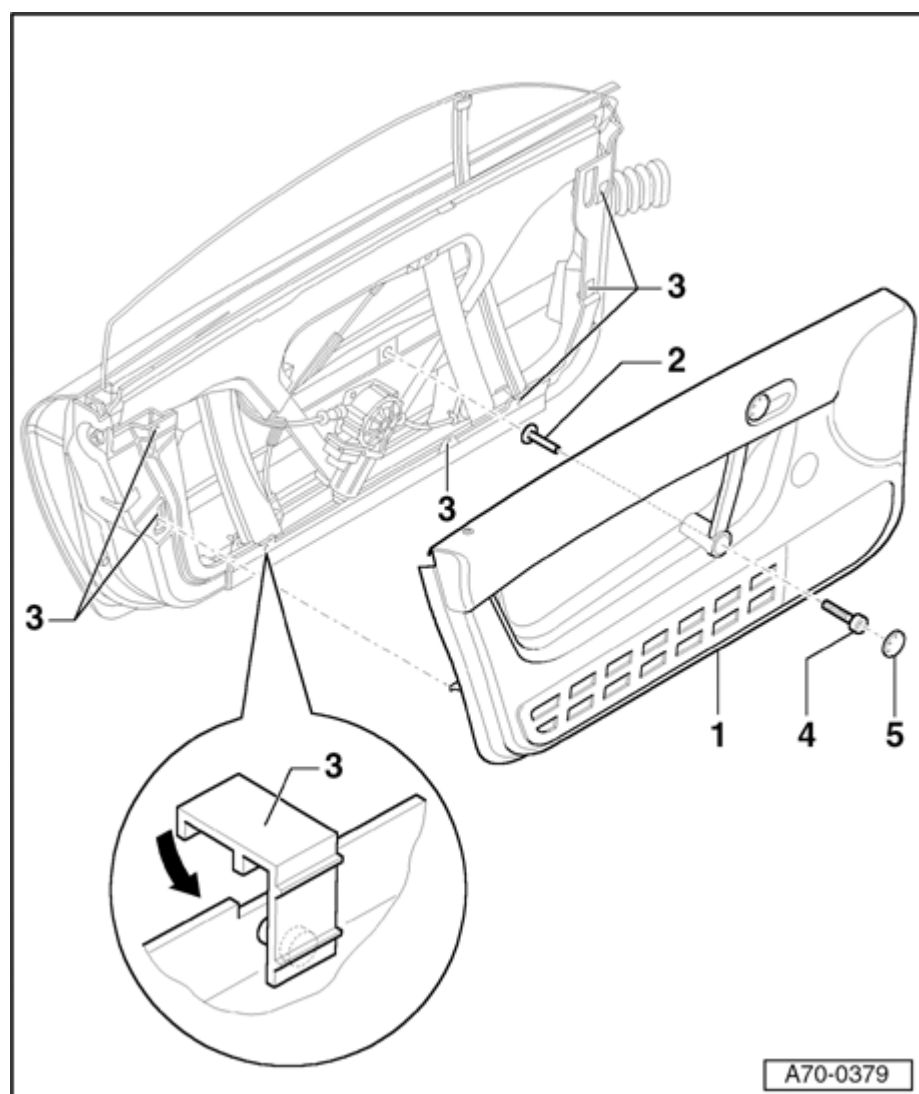


Audi > TT > 2000-2007**Body Interior****70 - Front door trim****Front door trim, removing and installing****1 - Door trim**

- ♦ Remove screw cap - **5** -
- ♦ Remove screw - **4** - (1x).
- ♦ Unclip inner and outer connecting pieces. .
- ♦ Lift door trim about 20 cm upward and remove from door.
- ♦ Detach release cable for interior door handle
- ♦ Disconnect electrical connectors

Clip locators - **3** - (7x) must be clipped in place when installing door trim.

2 - Sleeve**3 - Clip locators****4 - Screw**

- ♦ Tightening torque 7.5 Nm


5 - Screw cap

Detaching release cable

- Pull release cable - **1** - out of guide - **2** - and detach.


Note:

- ♦ When installing, make sure hook - **3** - is facing upward.

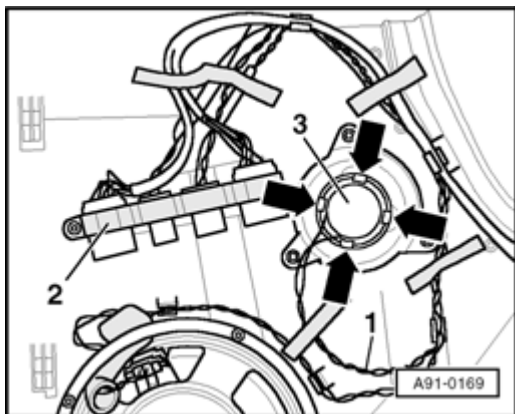

Disconnecting electrical connectors

- Disconnect harness connectors at item - **2** - .

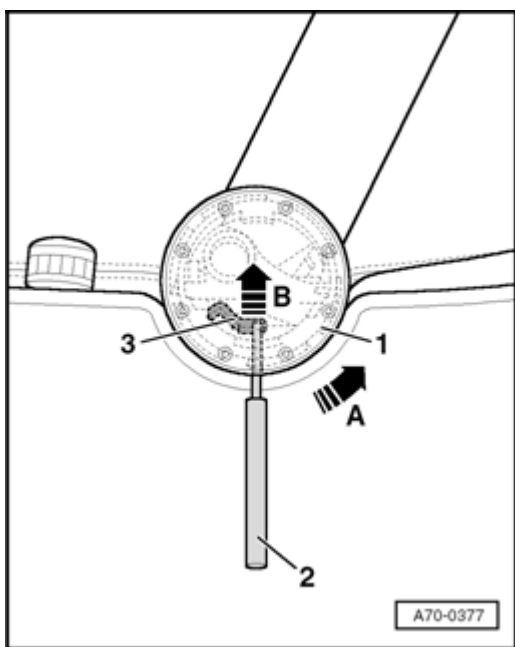


Removing screw cap

- Insert pin - **2** - (max. dia. 2 mm) through hole on bottom part of switch trim.
- Applying pin - **2** - press tab - **3** - slightly up and at the same time turn screw cap - **1** - in direction of - **arrow** - .
- Remove screw cap - **1** - .

Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed:

Audi > TT > 2000-2007
Body Interior
70 - Coupe Trim

Sill panel trim, removing

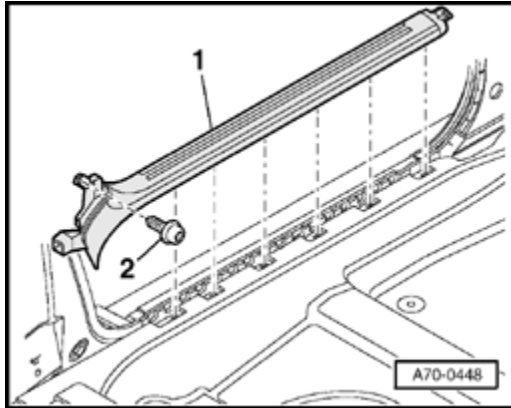


- Remove lower A-pillar trim ⇒ [Removing and installing lower A-pillar trim](#) .
- Remove side trim ⇒ [Rear side trim, removing and installing](#) .
- Remove bolt - **2** - .
- Tightening torque 1.5 Nm
- Unclip sill panel trim - **1** - (6x).


Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed:

Audi > TT > 2000-2007
Body Interior
70 - Coupe Trim

Removing and installing lower A-pillar trim

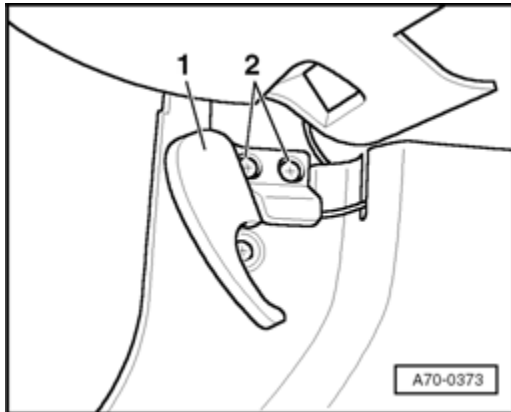

- Remove screws - **2** - (2x).
- Tightening torque 4 Nm
- Set aside hood lock cable - **1** - .

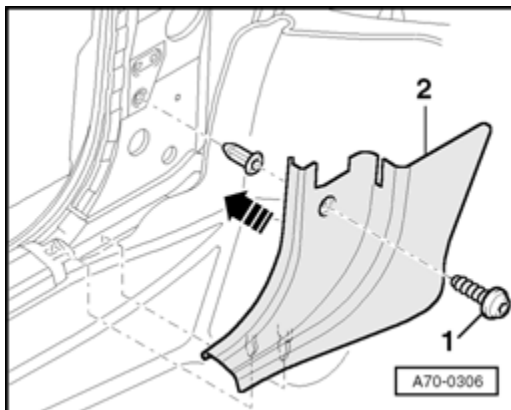


- Remove screw - **1** - .
- Tightening torque 1.5 Nm
- Unclip A-pillar trim - **2** - in direction of arrow.

Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed:

Audi > TT > 2000-2007
Body Interior
70 - Coupe Trim

Rear side trim, removing and installing

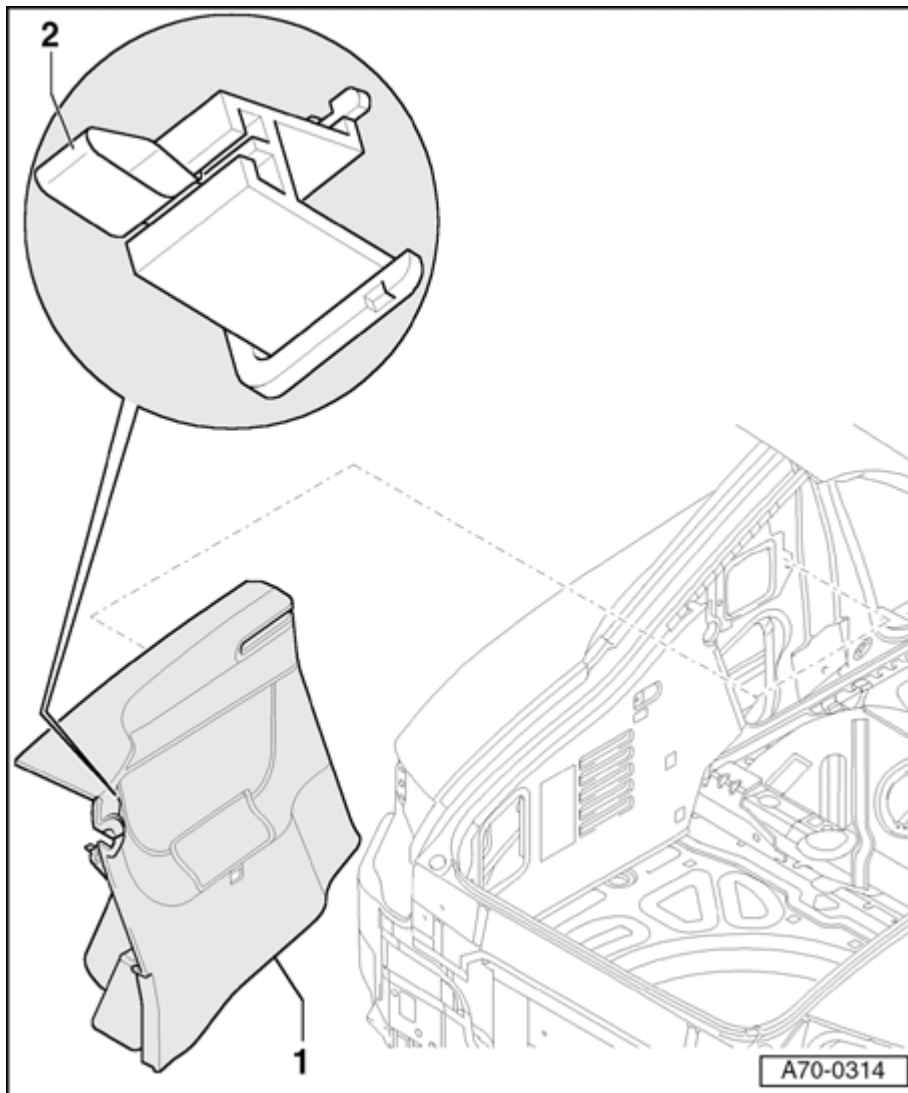

1 - Side trim


- ♦ Remove rear seat bench ⇒ [Rear seat bench, removing and installing](#) and backrest ⇒ [Rear seat backrest, removing and installing](#) .
- ♦ Remove outer seat belt anchorage point
- ♦ Remove striker pin of rear seat backrest
- ♦ Starting from top rear, unfasten side trim - **1** - from clips - **2** - (8x).

2 - Clips



Removing outer seat belt anchorage point

- Flip open cover flap - **1** - in direction of - **arrow** - .
- Remove bolt.
- Tightening torque 55 Nm

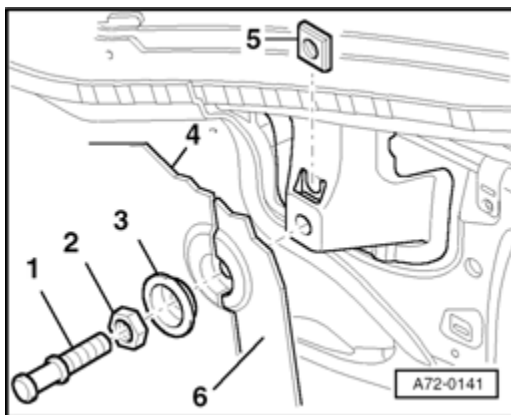

Removing striker pin

- Loosen nut - **2** - .
- Remove striker pin - **1** - .

- When installing, adjust striker pin.
- ♦ Luggage compartment side trim - **4** -
- ♦ Threaded plate - **5** -
- ♦ Side trim - **6** -

Copyright © 2006 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: